



**I : Inspection \*I : Audible check L : Lubrication R : Replace or change**

Items	Service Intervals (Odometer reading or months, whichever occurs first)		Service Intervals (Odometer reading or months, whichever occurs first)															
			12	24	36	48	60	72	84	96	108	120	132	144	156	168		
	Months	Odometer Reading	15	30	45	60	75	90	105	120	135	150	165	180	195	210		
<b>OPERATIONS INSIDE THE VEHICLE</b>																		
Check brake pedal for free play			I	I	I	I	I	I	I	I	I	I	I	I	I	I	I	I
				I		I		I		I		I		I		I		I
Replace air purifier filter	Normal usage		R	R	R	R	R	R	R	R	R	R	R	R	R	R	R	R
	Severe usage		R : More frequently															
Check operation of all functions and lights			I	I	I	I	I	I	I	I	I	I	I	I	I	I	I	I
Adjust the clearance of the brake shoe linings (vehicles with electric parking brake)			I	I	I	I	I	I	I	I	I	I	I	I	I	I	I	I
<b>OPERATIONS OUTSIDE THE VEHICLE</b>																		
Check wheel alignment				I		I		I		I		I		I		I		I
Check tyre pressures			I	I	I	I	I	I	I	I	I	I	I	I	I	I	I	I
Check front and rear wheel bearings for play						I					I				I			
Check brake hoses and pipes for leakage			I	I	I	I	I	I	I	I	I	I	I	I	I	I	I	I
Check brake pads and discs for wear	Normal usage		I	I	I	I	I	I	I	I	I	I	I	I	I	I	I	I
	Severe usage		I : Every 7,500km or every 6 months															
Check and adjust park brake shoe linings and inspect drums for wear	Normal usage			I		I		I		I		I		I		I		I
	Severe usage		I	I	I	I	I	I	I	I	I	I	I	I	I	I	I	I
Check operation of electric hand brake			I	I	I	I	I	I	I	I	I	I	I	I	I	I	I	I
Check fuel hoses and pipes for leakage or deterioration				I		I		I		I		I		I		I		I
<b>OPERATIONS AFTER ENGINE IS WARMED UP</b>																		
Check automatic transmission for fluid leakage (In case of leakage, check the fluid level)			I	I	I	I	I	I	I	I	I	I	I	I	I	I	I	I
Change automatic transmission fluid	Normal usage		R : Every 195,000km															
	Severe usage		R : Every 90,000km															
Change engine oil	Normal usage		R	R	R	R	R	R	R	R	R	R	R	R	R	R	R	R
	Severe usage		R : Every 7,500km															
Replace engine oil filter	Normal usage		R	R	R	R	R	R	R	R	R	R	R	R	R	R	R	R
	Severe usage		R : Every 7,500km															
<b>OTHERS</b>																		
Check body condition for damage			I : Every year															
Check the common rail engine (small injection quantity learning)			I	I	I	I	I	I	I	I	I	I	I	I	I	I	I	I
Reset maintenance service interval reminder			I	I	I	I	I	I	I	I	I	I	I	I	I	I	I	I
Road test			I	I	I	I	I	I	I	I	I	I	I	I	I	I	I	I

NOTE: \*1 : If excessive valve noise is evident, check the valve clearance.

"Severe usage" specifications apply to only vehicles used under severe operating conditions.

Severe operating conditions include the following cases :

- (1) Driving in a dusty area or in an area in which the vehicle is likely to be exposed to salty air or brine.
- (2) Driving on rough roads, on submerged roads, or hilly areas.
- (3) Driving in cold zones.
- (4) Engine idling for a long time or short-distance travel during cold weather.
- (5) Frequent, sudden application of brakes.
- (6) Towing of a trailer.
- (7) Use as a taxi or rental car.
- (8) More than 50% of operation time in heavy city traffic, or temperatures at, or above 32°C
- (9) More than 50% of operation time at speeds of 120km/h or higher in hot temperatures of 30°C or higher.
- (10) Operation under excessive load.