



<b>OPERATIONS INSIDE THE VEHICLE</b>															
Check brake pedal and clutch pedal for free play		I	I	I	I	I	I	I	I	I	I	I	I	I	I
Check parking brake lever stroke and play		I	I	I	I	I	I	I	I	I	I	I	I	I	I
Replace air purifier filter	Normal usage	R	R	R	R	R	R	R	R	R	R	R	R	R	R
	Severe usage	R : More frequently													
Check operation of all functions and lights		I	I	I	I	I	I	I	I	I	I	I	I	I	I
<b>OPERATIONS OUTSIDE THE VEHICLE</b>															
Check wheel alignment			I		I		I		I		I		I		I
Check tyre pressures		I	I	I	I	I	I	I	I	I	I	I	I	I	I
Check front and rear wheel bearings for play					I					I				I	
Check brake hoses and pipes for leakage		I	I	I	I	I	I	I	I	I	I	I	I	I	I
Check brake pads and discs for wear	Normal usage	I	I	I	I	I	I	I	I	I	I	I	I	I	I
	Severe usage	I : Every 7,500km or every 6 months													
Check brake shoe linings and drums (drum in disc) for wear	Normal usage		I		I		I		I		I		I		I
	Severe usage	I	I	I	I	I	I	I	I	I	I	I	I	I	I
Adjust the clearance of the brake shoe linings		I	I	I	I	I	I	I	I	I	I	I	I	I	I
Check fuel hoses and pipes for leakage or deterioration			I		I		I		I		I		I		I
<b>OPERATIONS AFTER ENGINE IS WARMED UP</b>															
Check automatic transmission for fluid leakage		I	I	I	I	I	I	I	I	I	I	I	I	I	I
Replace automatic transmission oil	Normal usage	R : Every 195,000km													
	Severe usage	R : Every 90,000km													
Change engine oil	Normal usage	R	R	R	R	R	R	R	R	R	R	R	R	R	R
	Severe usage	R : Every 7,500km													
Replace engine oil filter	Normal usage	R	R	R	R	R	R	R	R	R	R	R	R	R	R
	Severe usage	R : Every 7,500km													
Check exhaust gas recirculation (EGR) system (petrol powered vehicles)		I	I	I	I	I	I	I	I	I	I	I	I	I	I
<b>OTHERS</b>															
Check body condition for damage		I : Every year													
Perform diesel small quantity injection learning		I	I	I	I	I	I	I	I	I	I	I	I	I	I
Reset maintenance service interval reminder		I	I	I	I	I	I	I	I	I	I	I	I	I	I
Road test		I	I	I	I	I	I	I	I	I	I	I	I	I	I

NOTE:

\*1: If valve clearance noise is evident, perform valve clearance adjustment.

"Severe usage" specifications apply to only vehicles used under severe operating conditions.

Severe operating conditions include the following cases :

- (1) Driving in a dusty conditions or exposure to salty air or brine.
- (2) Driving on rough roads, on submerged roads, or hilly areas.
- (3) Driving in cold zones.
- (4) Engine idling for a long time, or short distance travel during cold weather.
- (5) Frequent or sudden application of brakes.
- (6) Trailer towing.
- (7) Use as a taxi, hire or rental vehicle.
- (8) More than 50% of heavy city traffic operation in temperatures above 32°C .
- (9) More than 50% of operation time at speeds of 120km/h or higher, during temperatures of 30°C or higher.
- (10) Operation under excessive load.