2022 MY XD ASX PERIODIC INSPECTION AND MAINTENANCE SCHEDULE

For items which indicate both distance and time (in months), the inspection should be madeat whichever (distance or time) comes first.

Maintenance operation code

I: Inspection L: Lubrication R: Replace or change

			Service Intervals (Odometer reading or months, whichever occurs first)							·+)						
Items Months			12	24	36	48	60	72	84	96				144	156	168
		15	30	45	60	75	90	105					180		210	
Odometer Reading			19	50	40	60	79	90	105	120	155	190	100	100	195	210
Check drive belt for cracks, fraying, wear, and adjust its tension			Т	Т	т	Т	т	т	т	т	Т	т	т	т	т	
	its tension		-	1	D I	·Evor	77 QO (100km			1	1				
Replace spark plugs Check valve clearance *1 3A9, 4A9 and 4B1, 4B4 engines			R :Every 90,000km I : Every 90,000km													
Check valve clearance "1 3A9, 4A9 and 4B1, 4B4 engines Check radiator hoses for damage and proper connection				I		· Eve	1 y 30,	T		Т		Т		т		
Check radiator noses for damage and proper connection Check engine coolant level in reservoir			I	I	Т	T	т		т	T	т	T	Т	T	т	T
0		1	1	R.	·Finar	105 ()()() rm	1	1	ther	L L	_ I		1		
Change engine coolant			R :First 165,000km or 8 years, thereafter every 105,000km or 5 years													
			I	I	т	100,0	T	or 5	years •	Т	т	Т	I	т	т 1	
Check air cleaner element for clogging and damage Normal usage		1	1	T	·Error	ry 7,50)Olema		1 1		<u>1</u>	1	Ι			
Severe usage				1	R	·Ever	ry 7,50	R	or eve	ery 6 .	R	is	1	R		
Replace air cleaner element Normal usage					·1/4	e frequ				ĸ			ĸ			
Severe usage Check fluid level in brake reservoir and clutch reservoir			I	Т	T	·MOre	e irequ	лепи <u>у</u> т	/ т	Т	Т	Т	Т	т	т 1	
		1	R		R	1	R	1	R	1	R	1	R		R	
Change brake fluid			I	T	-	T	T .	T.	-	T.	т	T	T	T.	т	
Check battery condition Replace fuel filter Petrol-powered vehicles			1	1	D D	· E	ry 150	T 0001	T	1	1 Orro	_ I	1	1		
Replace fuel filter Petrol-powered vehicles OPERATIONS UNDER THE VEHICLE					n.	· Eve	ту 150),000F	XIII OF	every	Toye	ars				
Check suspension system for damage and looseness						Т	т	т	т	Т	Т	Т	т Т	т	т	
Check suspension system for damage and fooseness Check suspension arm ball joints for play, and dust covers for damage			I	T		T T	T .	<u> </u>		T	T	T		T T		-
Check driveshaft boots for damage Normal usage		I	1		1	T T	<u> </u>		T	T	T	T	T	<u> </u>	<u></u>	
		1	1		·E	7.50	1	1	1	1	1	1	1	1		
Severe usage			т	т		·Ever	ry 7,50	JUKM	т	т	т	т	т	т	т	т -
Check steering linkage for damage and loose connections (including seals, boots and power assist fluid)			1	1	1	1	1	1	1	1	1	1	1	1	1	_
Check manual transmission for oil leakage (In case of leakage, check the oil level)			I	1		. 12	105	1 0001	1	1	1	1	1	1		
Change gear oil in manual transmission	F5MBD, F5MBB, W5MBB,	Normal usage		R : Every 195,000km R : Every 90,000km												
F6MBA, F6MBC and W6MBA models Severe usage			1	-	R	Eve	ry 90,	UUUkr	m	-	1	-	1	-		
Check exhaust pipe connections for gas leakage, and check pipe installation Normal usage			1		1		1		1		1		1		_1_	

OPERATIONS INSIDE THE VEHICLE																
Check brake pedal and clutch pedal for free play		Ι	I	Ι	Ι	I	Ι	Ι	I	Ι	I	I	Ι	I	Ι	
Check parking brake lever stroke and play		Ι	I	Ι	I	I	Ι	Ι	I	I	I	I	Ι	I	I	
Replace air purifier filter Normal usage		R	R	R	R	R	R	R	R	R	R	R	R	R	R	
Severe usage		R More frequently														
Check operation of all functions and lights		Ι	I	Ι	I	Ι	Ι	Ι	Ι	Ι	Ι	Ι	Ι	Ι	Ι	
OPERATIONS OUTSIDE THE VEHICLE																
Check wheel alignment			Ι		Ι		Ι		Ι		Ι		Ι		Ι	
Check tyre pressures		I	Ι	I	Ι	Ι	Ι	Ι	Ι	I	Ι	I	Ι	Ι	Ι	
Check front and rear wheel bearings for play						I				Ι				Ι		
Check brake hoses and pipes for leakage Norm		Normal usage	Ι	Ι	Ι	Ι	Ι	Ι	Ι	Ι	Ι	I	I	Ι	Ι	Ι
Severe usage			Ι		Ι		Ι		Ι		Ι		Ι		Ι	
Check brake pads and discs for wear Normal usage		Ι	Ι	Ι	Ι	Ι	Ι	Ι	Ι	Ι	I	Ι	Ι	Ι	Ι	
Severe usage			I Every 7,500km or every 6 months													
Check fuel hoses and pipes for leakage or deterioration			Ι		Ι		Ι		Ι		I		Ι		Ι	
OPERATIONS AFTER ENGINE IS WARMED UP																
Check fluid level in CVT		I	Ι	Ι	Ι	Ι	Ι	Ι	Ι	Ι	I	I	Ι	Ι	Ι	
Change CVT fluid Normal usage		• .														
		Severe usage				:Ever										
Change engine oil API classifica	ation:	Normal usage	R : Every 15,000km or every 12 months													
"For service	SG " or higher															
ACEA classif	fication: "For service	Severe usage			${f R}$: Eve	ry 7,5	00km								
,	3, A3/B4 or A5/B5 "															
Replace engine oil filter Normal usage		R : Every 15,000km or every 12 months														
		Severe usage			\mathbf{R}	: Eve	ry 7,5	00km								
OTHERS																
Check body condition for damage					Ι	: Eve	ry yea	ır			•					
Reset maintenance service interval reminder			I	I	Ι	I	I	Ι	Ι	I	I	I	I	Ι	I	I
Road test			Ι	I	Ι	Ι	I	Ι	Ι	Ι	Ι	I	I	Ι	Ι	Ι

NOTES: *1: If found any abnormal noise is noted from the valve train any time, please check the valve clearance.

Severe operating conditions include the following cases:

- (1) Driving in a dusty conditions or exposure to salty air or brine.
- (2) Driving on rough roads, on submerged roads, or hilly areas.
- (3) Driving in cold zones.
- (4) Engine idling for a long time or short-distance travel during cold weather.
- (5) Frequent, sudden application of brakes.

- (6) Towing of a trailer.
- (7) Use as a taxi or as a rent-a-car.
- (8) More than 50% of operation time in heavy city traffic in hot temperatures of 32°C or higher.
- (9) More than 50% of operation time at speeds of 120km/h or higher in hot temperatures of 30°C or higher.
- (10) Operation under excessive load.

[&]quot;Severe usage" specifications apply to only vehicles used under severe operating conditions.