## 23MY YB ECLIPSE CROSS INSPECTION AND MAINTENANCE SCHEDULE

For items which indicate both distance and time (in months), the inspection should be made at whichever (distance or time) comes first. Maintenance operation code I: Inspection L: Lubrication R: Replace or change

			Service Intervals (Odometer reading or months, whichever occurs first)															
14	Months		12	_	_		_		_	_		_				1.00		
Items		10001	12	24	36	48	60	72	84	96	108				156	_		
ODEDA	Odometer Reading TIONS INSIDE THE ENGINE COMPARTMENT	× 1000 km	15	30	45	60	75	90	105	120	135	150	165	180	195	210		
	Irive belt for cracks, fraying, wear and adjust its tension		l I	Ι.	T		T	Ι.	T	Т.	1	т.	ī		_			
	1 7 31 7					ı						!		!	$\vdash$			
	ntake air hose for damage				ı										$\vdash$			
	spark plugs			1*	1.4	1.0	1.4	R	1.0	*	1.6	1.0	1.0	R		*		
	alve clearance (* Denotes audible check only) *1		l*	l*  -	l*	l*	l*		l*	+	l*	l*	l*	<u> </u>	l*	- 1*		
	adiator hoses for damage and proper connection		1					1	<b>!</b>	I	<u> </u>	!			$\vdash$			
Check engine coolant level in reservoir			L L					<u> </u>		l			<u> </u>	ш				
Change engine coolant *2						R: First 195,000km or 10 years, thereafter every 120,000km or 6 years												
Check a	ir cleaner element for clogging and damage	Normal usage Severe usage		I	ı	ı	I	I		I	I		ı	I		I		
	33 34 444 434						I: Ev		500km	or eve	ery 6 mo	onths						
Replace	air cleaner element	Normal usage			R			R			R			R	Ш			
' Severe usage		Severe usage	ge R: More frequently															
	luid level in brake reservoir		ı	I	ı	ı	I	I	I	ı	I	- 1	- 1	I		1		
_	brake fluid			R		R		R		R		R		R		R		
	attery condition		- 1	- 1	- 1	I	I	- 1	I	I	I	- 1	I	I		I		
Replace	fuel filter											R						
<b>OPERA</b>	TIONS UNDER THE VEHICLE																	
Check s	uspension system for damage and looseness		Ι	I	I	ı	I	I	I	Ι	I	ı	-	- 1		Ι		
Check s	uspension arm ball joints for play, and dust covers for damage		Ι	I	ı	ı	- 1	ı	1	ı	I	ı	- 1	- 1		I		
Check driv	iveshaft boots for damage	Normal usage	1	I	-	ı	ı	ı	ı	-	I	ı	-	- 1	- 1	1		
		Severe usage	I: Every 7,500km or every 6 months															
Check s	teering linkage for damage and loose connections							,										
(includi	ng seals, boots and power assist fluid)		'	'					'	'	'	1	'	1				
Check t	ransfer for oil leakage (AWD models only)																	
(in case	of leakage, check the oil level)								'	'	'		'	'				
Cl	ge gear oil in transfer (AWD models only)	Normal usage					R					R						
Change		Severe usage			R			R			R			R				
Check 1	ront and rear differential for oil leakage (AWD models only)		١.	١.		١.	١.		١.	١.	1	Ì.	١.					
(In cas	e of leakage, check the oil level)								'	I			'	'		'		
	ear oil in front and rear differential (AWD models only)	Normal usage						R						R				
		Severe usage			R			R			R			R				
Check 6	xhaust pipe connections for gas leakage, and check pipe installation	Normal usage		I		ı		ı		Ι		ı		ı		П		
	TIONS INSIDE THE VEHICLE																	
Check l	rake pedal for free play		I	1	l i	ı	l i	ı	П	T	l i	l i	1	ı				
	arking brake lever stroke and play		i	Ė	i	Ė	i	i	ΙĖ	i i	i	ΤĖ	Ħ	Ħ		$\neg$		
		Normal usage	R	R	R	R	R	R	R	R	R	R	R	R	R	R		
	e air purifier filter	Severe usage								freque						=		
Check	peration of all functions and lights		ı	ı	ı	I	ı	1		1	1	ı	ı	ı				
			•							•								

			Service Intervals (Odometer reading or months, whichever occurs first)													
Items	Months		12	24	36	48	60	72	84	96	108				156	168
	Odometer Reading	× 1000 km	15	30	45	60	75	90	105	120	135	150	165	180	195	210
OPERA	TIONS OUTSIDE THE VEHICLE															
Check v	vheel alignment			1		ı		- 1		ı		ı		ı		I
Check tyre pressures		I	_	_	ı	-	- 1		1		- 1	- 1	- 1		1	
Check f	ront and rear wheel bearings for play					- 1				1				- 1		
Check brake hoses and pipes for leakage  Normal usage Severe usage		I	-	-	I	-	I	- 1	I		- 1	ı	- 1	I	I	
		l: Every 7,500km or every 6 months														
Chack I	Check brake pads and discs for wear Severe usage		I	_	_	ı	-	I	-	I	- 1	- 1	-	I	I	I
CHECK			l: Every 7,500km or every 6 months													
Check fuel hoses and pipes for leakage or deterioration			_		ı		I		I		- 1		I		I	
<b>OPERA</b>	TIONS AFTER ENGINE IS WARMED UP															
Check f	luid level in automatic transmission and CVT		I	_	_	ı	-	I	-	I	- 1	- 1	-	I	I	I
Change	Change fluid in automatic transmission and CVT  Normal usage							R						R		
Change hald in automatic transmission and CV1		Severe usage			R			R			R			R		
Change engine oil	engine oil	Normal usage	R	R	R	R	R	R	R	R	R	R	R	R	R	R
	engine on	Severe usage	R: Every 7,500km or every 6 months													
Replace engine oil filter	Normal usage	R	R	R	R	R	R	R	R	R	R	R	R	R	R	
керіас	Sever		R: Every 7,500km or every 6 months													
OTHER																
Check l	oody condition for damage		I	I	I	I	I	I	I	I	I	I	I	I	1	I
Reset r	naintenance service interval reminder		I	I	I	I	- 1	I	I	I	I	I	I	I		1
Road to	est		I	I	Ī	ı	I	I	- 1	I	I	I	Ī	I	1	1

## NOTES:

- \*1 : If any abnormal noise is noted from the valve train at any time, please check the valve clearances.
- \*2 : Use only MITSUBISHI MOTORS Genuine Super Long Life Coolant Premium or equivalent with proper mixture ratio of 50% anti-freeze and 50% demineralized or distilled water. Mixing any other type of coolant or the use of non-distilled water will reduce the life expectancy of the factory-fill coolant

"Severe usage" specifications apply to only vehicles used under severe operating conditions.

Severe operating conditions include the following cases :

- (1) Driving in a dusty conditions or exposure to salty air or brine.
- (2) Driving on rough roads, on submerged roads, or hilly areas.
- (3) Driving in cold zones.
- (4) Engine idling for a long time or short-distance travel during cold weather.
- (5) Frequent, sudden application of brakes.

- (6) Towing of a trailer.
- (7) Use as a taxi or as a rent-a-car.
- (8) More than 50% of operation time in heavy city traffic in hot temperatures of 32°C or higher.
- (9) More than 50% of operation time at speeds of 120km/h or higher in hot temperatures of  $30^{\circ}\text{C}$  or higher.
- (10) Operation under excessive load.