



Items	Service Intervals (Odometer reading or months, whichever occurs first)																
	Months	12	24	36	48	60	72	84	96	108	120	132	144	156	168		
	Odometer Reading × 1000 km	15	30	45	60	75	90	105	120	135	150	165	180	195	210		
<b>OPERATIONS OUTSIDE THE VEHICLE</b>																	
Check wheel alignment		I		I		I		I		I		I		I		I	
Check tyre pressures	I	I	I	I	I	I	I	I	I	I	I	I	I	I	I	I	
Check front and rear wheel bearings for play				I									I				
Check brake hoses and pipes for leakage	Normal usage		I		I		I		I		I		I		I		
	Severe usage	I	I	I	I	I	I	I	I	I	I	I	I	I	I	I	
Check brake pads and discs for wear	Normal usage	I	I	I	I	I	I	I	I	I	I	I	I	I	I	I	
	Severe usage	I: Every 7,500km or every 6 months															
Check fuel hoses and pipes for leakage or deterioration		I		I		I		I		I		I		I		I	
<b>OPERATIONS AFTER ENGINE IS WARMED UP</b>																	
Check fluid level in automatic transmission and CVT	I	I	I	I	I	I	I	I	I	I	I	I	I	I	I	I	
Change fluid in automatic transmission and CVT	Normal usage						R						R				
	Severe usage	R: Every 40,000km															
Change engine oil	Normal usage	R	R	R	R	R	R	R	R	R	R	R	R	R	R	R	
	Severe usage	R: Every 7,500km or every 6 months															
Replace engine oil filter	Normal usage	R	R	R	R	R	R	R	R	R	R	R	R	R	R	R	
	Severe usage	R: Every 7,500km or every 6 months															
<b>OTHERS</b>																	
Check body condition for damage	I	I	I	I	I	I	I	I	I	I	I	I	I	I	I	I	
Reset maintenance service interval reminder	I	I	I	I	I	I	I	I	I	I	I	I	I	I	I	I	
Road test	I	I	I	I	I	I	I	I	I	I	I	I	I	I	I	I	

**NOTES:**

\*1 : If any abnormal noise is noted from the valve train at any time, please check the valve clearances.

\*2 : Use only MITSUBISHI MOTORS Genuine Super Long Life Coolant Premium or equivalent with proper mixture ratio of 50% anti-freeze and 50% demineralized or distilled water. Mixing any other type of coolant or the use of non-distilled water will reduce the life expectancy of the factory-fill coolant

"Severe usage" specifications apply to only vehicles used under severe operating conditions.

Severe operating conditions include the following cases :

- (1) Driving in a dusty conditions or exposure to salty air or brine.
- (2) Driving on rough roads, on submerged roads, or hilly areas.
- (3) Driving in cold zones.
- (4) Engine idling for a long time or short-distance travel during cold weather.
- (5) Frequent, sudden application of brakes.

- (6) Towing of a trailer.
- (7) Use as a taxi or as a rent-a-car.
- (8) More than 50% of operation time in heavy city traffic in hot temperatures of 32°C or higher.
- (9) More than 50% of operation time at speeds of 120km/h or higher in hot temperatures of 30°C or higher.
- (10) Operation under excessive load.