

25MY QG PAJERO SPORT INSPECTION AND MAINTENANCE SCHEDULE

For items which indicate both distance and time (in months), the inspection should be made at whichever (distance or time) comes first. Maintenance operation code
 I: Inspection L: Lubrication R: Replace or change

Items			Service Intervals (Odometer reading or months, whichever occurs first)															
	Months		12	24	36	48	60	72	84	96	108	120	132	144	156	168		
	Odometer Reading	× 1000 km	15	30	45	60	75	90	105	120	135	150	165	180	195	210		
OPERATIONS INSIDE THE ENGINE COMPARTMENT																		
Check drive belt for cracks, fraying, wear, and adjust its tension				I		I		I		I		I		I		I		
Check intake air hose and turbocharger oil hose for damage			I	I	I	I	I	I	I	I	I	I	I	I	I	I		
Check valve clearance (* Denotes audible check only)			I*	I*	I*	I	I*	I*	I*	I	I*	I*	I*	I	I*	I*		
Check radiator hoses for damage and proper connection				I		I		I		I		I		I		I		
Check engine coolant level in reservoir			I	I	I	I	I	I	I	I	I	I	I	I	I	I		
Change engine coolant *1			R: First 165,000km or 8 years, thereafter every 105,000km or 5 years															
Check air cleaner element for clogging and damage			Normal usage	I	I	I	I	I	I	I	I	I	I	I	I	I		
			Severe usage	I: Every 7,500km or every 6months														
Replace air cleaner element			Normal usage			R						R			R			
			Severe usage	R: More frequently														
Check fluid level in brake reservoir			I	I	I	I	I	I	I	I	I	I	I	I	I	I		
Change brake fluid				R		R		R		R		R		R		R		
Check battery condition			I	I	I	I	I	I	I	I	I	I	I	I	I	I		
Replace fuel filter			R	R	R	R	R	R	R	R	R	R	R	R	R	R		
OPERATIONS UNDER THE VEHICLE																		
Check suspension system for damage and looseness			I	I	I	I	I	I	I	I	I	I	I	I	I	I		
Check suspension arm ball joints for play, and dust covers for damage			I	I	I	I	I	I	I	I	I	I	I	I	I	I		
Lubricate suspension arm, steering linkage and propeller shaft with grease fitting				L		L		L		L		L		L		L		
Check driveshaft boots for damage			Normal usage	I	I	I	I	I	I	I	I	I	I	I	I	I		
			Severe usage	I: Every 7,500km														
Check steering linkage for damage and loose connections (including seals, boots and power assist fluid)			I	I	I	I	I	I	I	I	I	I	I	I	I	I		
Check transfer for oil leakage (4WD only) (In case of leakage, check the oil level)			I	I	I	I	I	I	I	I	I	I	I	I	I	I		
Change gear oil in transfer (4WD only)			Normal usage						R					R				
			Severe usage		R		R		R		R		R		R		R	
Check front (4WD only) and rear differential for oil leakage (In case of leakage, check the oil level)			I	I	I	I	I	I	I	I	I	I	I	I	I	I		
Change gear oil in front (4WD only) and rear differential			Normal usage				R					R						
			Severe usage		R		R		R		R		R		R		R	
Check exhaust pipe connections for gas leakage, and check pipe installation				I		I		I		I		I		I		I		
OPERATIONS INSIDE THE VEHICLE																		
Check brake pedal for free play			I	I	I	I	I	I	I	I	I	I	I	I	I	I		
Check parking brake lever stroke and play			I	I	I	I	I	I	I	I	I	I	I	I	I	I		
Replace air purifier filter			Normal usage	R	R	R	R	R	R	R	R	R	R	R	R	R		
			Severe usage	R: More frequently														
Check operation of all functions and lights			I	I	I	I	I	I	I	I	I	I	I	I	I	I		

Items	Months	Odometer Reading × 1000 km	Service Intervals (Odometer reading or months, whichever occurs first)													
			12	24	36	48	60	72	84	96	108	120	132	144	156	168
			15	30	45	60	75	90	105	120	135	150	165	180	195	210
OPERATIONS OUTSIDE THE VEHICLE																
Check wheel alignment			I		I		I		I		I		I		I	
Check tyre pressures			I		I		I		I		I		I		I	
Check front and rear wheel bearings for play					I				I				I			
Check brake hoses and pipes for leakage	Normal usage			I		I		I		I		I		I		I
	Severe usage	I	I	I	I	I	I	I	I	I	I	I	I	I	I	I
Check brake pads/linings and discs/drums for wear	Normal usage	I	I	I	I	I	I	I	I	I	I	I	I	I	I	I
	Severe usage	I: Every 7,500km or every 6months														
Adjust the clearance of the brake shoe linings (vehicles with electric parking brake)			I		I		I		I		I		I		I	
Check fuel hoses and pipes for leakage or deterioration			I		I		I		I		I		I		I	
OPERATIONS AFTER ENGINE IS WARMED UP																
Check automatic transmission for fluid leakage (In case of leakage, check the fluid level)			I		I		I		I		I		I		I	
Change automatic transmission fluid	Normal usage														R	
	Severe usage							R							R	
Change engine oil	Normal usage	R	R	R	R	R	R	R	R	R	R	R	R	R	R	R
	Severe usage	R: Every 7,500km														
Replace engine oil filter	Normal usage	R	R	R	R	R	R	R	R	R	R	R	R	R	R	R
	Severe usage	R: Every 7,500km														
OTHERS																
Check body condition for damage			I		I		I		I		I		I		I	
Check the common rail engine (small injection quantity learning)			I		I		I		I		I		I		I	
Reset maintenance service interval reminder			I		I		I		I		I		I		I	
Road test			I		I		I		I		I		I		I	

NOTE:

*1 : Use only MITSUBISHI MOTORS Genuine Super Long Life Coolant Premium or equivalent with proper mixture ratio of 50% anti-freeze and 50% demineralized or distilled water.

"Severe usage" specifications apply to only vehicles used under severe operating conditions. Severe operating conditions include the following cases :

- (1) Driving in a dusty area or in an area in which the vehicle is likely to be exposed to salty air or brine.
- (2) Driving on rough roads, on submerged roads, or hilly areas.
- (3) Driving in cold zones.
- (4) Engine idling for a long time or short-distance travel during cold weather.
- (5) Frequent, sudden application of brakes.
- (6) Towing of a trailer.
- (7) Use as a taxi or as a rent-a-car.
- (8) More than 50% of operation time in heavy city traffic in hot temperatures of 32°C or higher.
- (9) More than 50% of operation time at speeds of 120km/h or higher in hot temperatures of 30°C or higher.
- (10) Operation under excessive load.