PERIODIC INSPECTION AND MAINTENANCE SCHEDULE 21 MY SN EXPRESS VAN

For items which indicate both distance and time (in months), the inspection should be madeat whichever (distance or time) comes first.

Maintenance operation code

I: Inspection L: Lubrication R: Replace or change ●: Applicable	None: Not applica	ble
---	-------------------	-----

1 Hispoolion	Service Intervals (Odometer reading or months, whichever occurs first)						irst)									
Items	Months		12	24	36	48	60	72	84	96	108	120	132	144	156	168
	Odometer Reading	× 1000 km	15	30	45	60	75	90	105	120	135	150	165	180	195	210
	NS INSIDE THE ENGINE COMPARTMENT													·	·	
	t for cracks, fraying, wear, and adjust its tension		I	Ι	Ι	I	I	Ι	Ι	Ι	Ι	Ι	Ι	Ι	Ι	Ι
Check intake ai	r hose and turbocharger oil hose for damage (vehicle with turbocharger)		Ι	Ι	Ι	Ι	Ι	Ι	Ι	Ι	Ι	Ι	Ι	Ι	Ι	Ι
Check radiator	hoses for damage and proper connection			Ι		Ι		Ι		Ι		Ι		Ι		Ι
Check engine co	polant level in reservoir		Ι	Ι	Ι	Ι	Ι	Ι	Ι	Ι	Ι	Ι	Ι	Ι	Ι	Ι
Replace engine	coolant		R: Every 120,000km or 4 years													
Check air clean	er element for clogging and damage	Normal usage	I	Ι	Ι	Ι	Ι	Ι	Ι	Ι	Ι	Ι	Ι	Ι	Ι	Ι
		Severe usage			I	:Eve	ery 7,	,500k	m or	ever	y 6 m	ionth	ıs			
Replace air clea	ner element	Normal usage		R		R		R		R		R		R		R
		Severe usage			R	:Mo	re fre	equer	ıtly							
Check fluid leve	el in brake reservoir and clutch reservoir		I	I	I	I	I	I	Ι	Ι	Ι	Ι	Ι	Ι	Ι	I
Replace brake f	luid (Note: Factory fill brake fluid has 4 year life)					R		R		R		R		R		R
Check battery of			Ι	Ι	I	I	I	I	Ι	Ι	Ι	Ι	Ι	Ι	Ι	Ι
	k Air conditioner unit			Ι		I		Ι		Ι		Ι		Ι		Ι
	Replace fuel filter					R		R		R		R		R		R
OPERATIO	NS UNDER THE VEHICLE															
Check suspensi	on system for damage and looseness		I	I	I	I	I	I	Ι	I	Ι	Ι	Ι	I	I	I
Check suspensi	on arm ball joints for play, and dust covers for damage		I	I	Ι	I	I	Ι	Ι	Ι	Ι	Ι	Ι	Ι	Ι	I
Lubricate suspension arm, steering linkage			L		L		L		L		L		L		L	
Check drivesha	ft boots for damage	Normal usage	I	Ι	I	I	I	Ι	Ι	Ι	Ι	Ι	Ι	Ι	I	I
		Severe usage			I	:Eve	ery 7,	,500k	m							
	linkage for damage and loose connections (including seals, boots and power assist fluid)	•	I	Ι	I	Ι	Ι	Ι	Ι	Ι	Ι	Ι	Ι	Ι	Ι	I
Check manual transmission for oil leakage (In case of leakage, check the oil level)			I	Ι	Ι	I	I	Ι	Ι	Ι	Ι	Ι	Ι	Ι	Ι	Ι
Replace gear oil in manual transmission Normal usage		e R : Every 105,000km														
		Severe usage			R	: Ev	ery 4	15,000	Okm							
Check front diffe	erential for oil leakage (In case of leakage, check the oil level)		I	I	Ι	Ι	Ι	Ι	Ι	Ι	Ι	Ι	Ι	I	I	I
Check exhaust	pipe connections for gas leakage, and check pipe installation			I		I		I		I		Ι		I		I

I: Inspection L: Lubrication R: Replace or change ●: Applicable None: Not applicable Service Intervals (Odometer reading or months, whichever occurs first) Items Months 12 24 36 48 60 72 84 96 108 120 132 144 156 Odometer Reading 15 30 45 60 75 90 105 120 135 150 165 180 195 × 1000 km OPERATIONS INSIDE THE VEHICLE Check brake pedal and clutch pedal for free play Check operation of all functions and lights II Check parking brake lever stroke and play Replace air purifier filter R R R R R Normal usage Severe usage R : More frequently OPERATIONS OUTSIDE THE VEHICLE Check wheel alignment (Visual inspection for tyre wear) Check tyre pressures Check front and rear wheel bearings for play Ι Ι Check brake hoses and pipes for leakage Check brake pads and discs for wear Normal usage I : Every 7,500km or every 6 months Severe usage Check fuel hoses and pipes for leakage or deterioration OPERATIONS AFTER ENGINE IS WARMED UP Check automatic transmission for fluid leakage (In case of leakage, check the fluid level) I I I I I I I I I I I Replace automatic transmission fluid R :Every 90,000km Normal usage Note: Transmission oil filter replacement required Severe usage **R** :Every 45,000km Replace engine oil R: Every 15,000km or every 12 months Normal usage **R**: Every 7,500km Severe usage Replace engine oil filter Normal usage **R**: Every 15,000km or every 12 months **R**: Every 7,500km Severe usage OTHERS Check body condition for damage I : Every year I I I I I | I | I | I | I | I Reset service interval reminder Road test IIIIIIII IIIII

N()ΤE
----	-----

*1: If found any noise from the valve any time, please check the valve clearance.					
"Severe usage" specifications apply to only vehicles used under severe operating conditions.					
Severe operating conditions include the following cases:					
(1) Driving in a dusty area or in an area in which the vehicle is likely to be exposed to salty air or brine.					
(2) Driving on rough roads, on submerged roads, or hilly areas.					
(3) Driving in cold zones.					
(4) Engine idling for a long time or short-distance travel during cold weather.					
(5) Frequent, sudden application of brakes.					
(6) Towing of a trailer.					
(7) Use as a taxi or as a rent-a-car.					
(8) More than 50% of operation time in heavy city traffic in hot temperatures of 32°C or higher.					
(9) More than 50% of operation time at speeds of 120km/h or higher in hot temperatures of 30°C or higher.					
(10) Operation under excessive load.					

OILS AND FLUIDS							
Part Number	Discription	Specification					
7711943734	Engine oil DSL R9M 1.6	MM0720, 5W30 C4					
7711943728	Engine oil DSL M9R 2.0	MM17, 5W30 C3					
AU901456	Coolant	Glaceol RX type D					
AU901457	Gear oil ATF	DCT MV					
AU901461	Gear oil MTF	NFJ 75W85					
AU901462	Reagent Fluid	AdBlue 15 Ltr container					
MR936863	Brake Fluid	Dot4					
Power Assist F	luid (Filled for life)	Dexron II or III					