



	Months	Service Intervals (Odometer reading or months, whichever occurs first)															
		12	24	36	48	60	72	84	96	108	120	132	144	156	168	180	
Odometer Reading × 1000 km		15	30	45	60	75	90	105	120	135	150	165	180	195	210	225	

### OPERATIONS INSIDE THE VEHICLE

Check brake pedal and clutch pedal for free play	I	I	I	I	I	I	I	I	I	I	I	I	I	I	I	I
Check parking brake lever stroke and play	I	I	I	I	I	I	I	I	I	I	I	I	I	I	I	I
Replace air purifier filter	R	R	R	R	R	R	R	R	R	R	R	R	R	R	R	R
Check all lights	I	I	I	I	I	I	I	I	I	I	I	I	I	I	I	I
Check all controls for correct operation (wipers/washers/ a/c etc)	I	I	I	I	I	I	I	I	I	I	I	I	I	I	I	I
Check seatbelts for correct functions	I	I	I	I	I	I	I	I	I	I	I	I	I	I	I	I

### OPERATIONS OUTSIDE THE VEHICLE

Check wheel alignment (visual inspection for tyre wear)	I	I	I	I	I	I	I	I	I	I	I	I	I	I	I	I
Check front and rear wheel bearings for play	I	I	I	I	I	I	I	I	I	I	I	I	I	I	I	I
Check brake hoses and pipes for leakage	I	I	I	I	I	I	I	I	I	I	I	I	I	I	I	I
Check brake pads and discs for wear	Normal usage	I	I	I	I	I	I	I	I	I	I	I	I	I	I	I
	Severe usage	I :Every 7,500km or every 6 months														
Check brake shoe linings and drums (drum in disc) for wear	Normal usage	I	I	I	I	I	I	I	I	I	I	I	I	I	I	I
	Severe usage	I :Every 7,500km or every 6 months														
Check fuel hoses and pipes for leakage or deterioration		I		I		I		I		I		I		I		I
Check tyre pressures	I	I	I	I	I	I	I	I	I	I	I	I	I	I	I	I
Check wipers rubbers	I	I	I	I	I	I	I	I	I	I	I	I	I	I	I	I

### OPERATIONS AFTER ENGINE IS WARMED UP

Check automatic transmission for fluid leakage (In case of leakage, check the fluid level)	V5AWF model	I	I	I	I	I	I	I	I	I	I	I	I	I	I	I	
Change automatic transmission fluid	V5AWF model	Normal usage	R :Every 195,000km														
		Severe usage	R :Every 90,000km														
Change engine oil	Diesel-powered vehicles with 4M41 DI-D engine without DPF	Normal usage	R	R	R	R	R	R	R	R	R	R	R	R	R	R	R
		Severe usage	R :Every 7,500km														
Replace engine oil filter		Normal usage	R	R	R	R	R	R	R	R	R	R	R	R	R	R	R
		Severe usage	R :Every 7,500km														
Check engine idling speed		I	I	I	I	I	I	I	I	I	I	I	I	I	I	I	
Check exhaust gas recirculation (EGR) system		I	I	I	I	I	I	I	I	I	I	I	I	I	I	I	

### OTHERS

Check body condition for damage		I :Every year														
Perform common rail engine small injection quantity learning		I	I	I	I	I	I	I	I	I	I	I	I	I	I	I
Road test		I	I	I	I	I	I	I	I	I	I	I	I	I	I	I

#### NOTE

\*1: If found any noise from the valve any time, please check the valve clearance.

\*Severe usage\* specifications apply to only vehicles used under severe operating conditions.

Severe operating conditions include the following cases :

(1) Driving in dusty area.

(2) Driving on rough roads, on submerged roads, or hilly areas.

(3) Driving in cold zones.

(4) Engine idling for a long time, or short-distance travel during cold weather.

(5) Frequent sudden application of brakes.

(6) Towing of a trailer.

(7) Use as a taxi or as a rent-a-car.

(8) When more than 50% of the driving is in heavy city traffic and the ambient temperature is 32° or more.

(9) When more than 50% of the driving is at 120km/h or more and the ambient temperature is 30° or more.