## **Installation – Painting Instructions**



## RINGFEDER Type RF40G150 RINGFEDER Type RF50BNZ

22.10.2003 10069125

Installation - Painting Instructions

RF40G150



## 1000 kg 2000 kg 2500 kg 1000 kg

**V-value:** 75 kN 63 kN 50 kN 60 kN When fitting / replacing the trailer coupling please attend to the relevant statutory regulations and the particular information from the vehicle manufacturers.

The fitting of the trailer coupling onto the truck is to be done in accordance with the requirements of supplement VII of the EU directive 94/20 EC.

The coupling should be mounted to a drawbeam which fulfils the requirements of ISO 3584 cat. 3.

The coupling has a high-quality corrosion resistance through electrolytic treatment and a top-coat with high wear resistance. To maintain the high quality of the surface treatment, RINGFEDER recommend that no futher paint is added to the coupling. If the coupling is over-painted, you run the risk of operational problems, a sticking signal/indicator pin or that important information is overpainted. Moving parts, plates and decals must all be thoroughly covered if the coupling is repainted.

Installation should be done in a proper and competent manner. Always follow the instructions. All directives and instructions should be kept in the vehicle for future service and maintenance.

RF50BNZ