Assembly Instructions




Steering Axle Kinpin Repair Tool Kit


Assembly Instructions Apply to all SAF Steering Axles except SKNLB & BINL

BIL Type

BILL Type

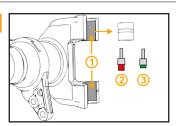

Iteam	Description
1	Bearing Bush
2	Mounting Bolts
3	Assembly mandrel

 

Iteam	Description	
1	Mounting Bolts	
2	Assembly mandrel	
3	Bearing Bush	
4	Sliding bolt top	
5	Sliding bolt bottom	



Steering Knuckle with upper and lower bearing bush.



Steering Knuckle with upper and lower bearing



Drive out bearing bushes with mounting bolt #3.



Align socket# 1,bolt & nut #4& 5



Drive out and in bearing bushes similar to step



New slide bolts inserts in to steering knuckle





are shown below Position 1: Lower Sliding bush Position 2: Upper sliding bush.



Using Assembly mandrel# 2 install new bearing bushes Pay attention to position of lubrication channels marked in yellow.



Drive in new bearing bush until bearing bush is flushed with stub axle. Bearing bush must not protrude.

Tool kit Part # 0 3434334500 or HT3345(Hire Tool)



Pos	Beschreibung
1	Socket for assembly/ disassembly 04434423600
2	Assembly Mandrel 04434423500
3	Mounting Bolt 04434423400
4	Hexagon screw M36x150
5	Nut M36
6	Spacer Tube for assembly/ dismantling 04434423700





Pos 1: Mounting bolt 04434423400 Pos 2: Spacer tube 04434423700

With positively steered axles, the socket position is too low for the driving tool. After driving in the bearing bush with the assembly mandrel, fit the assembly bolt with the spacer tube and drive the bearing bush into the correct position until it is flush with the axle stub.



Scan Me



